

InspireBoard™200 SERIESInteractive Whiteboard

User's guide

# Product registration

If you register your InspireBoard product, we'll notify you of new features and software upgrades.

Keep the following information	on available in case you need to contact InspireBoard Support.
Serial number:	
Date of purchase:	

# Important information

Before you install and use your InspireBoard 200 series interactive whiteboard, read and understand the safety warnings and precautions in this user's guide and the included warnings document. The included warnings document describes the safe and correct operation of your InspireBoard interactive whiteboard and its accessories, helping you to prevent injuries and equipment damage.

## **I** NOTE

In this document, the term "interactive whiteboard" refers to your interactive whiteboard and its accessories and options.

## **Table of Contents**

Chapter 1	1
Introducing your Inspire Board interactive whiteboard	1
How does your Inspire Board interactive whiteboard work?	2
Computer requirements	2
Accessories and replacement parts	2
Installation tips	2
Chapter 2	∠
Connecting your interactive whiteboard to a computer	∠
Installing InspireBoard Product Drivers	∠
Orienting your interactive whiteboard	
Chapter 3	6
Using your interactive whiteboard	
Using the Floating Tools toolbar	6
Using gestures, dual touch and dual write	7
Chapter 4	12
Maintenance and troubleshooting	
Tips for trouble-free performance	
Cleaning your interactive whiteboard	
General troubleshooting	
Contacting Support	

## Introducing your Inspire Board interactive whiteboard

#### Introduction

Your InspireBoard product is a wall-mounted, front projection interactive whiteboard. It enables you to do everything that you can do at your computer—open and close applications, scroll through files, hold meetings with others, create new documents or edit existing ones, visit websites, play video clips and more—by touching the interactive surface with your finger or the included pen. When you connect your interactive whiteboard to a computer and a projector, your computer image displays on the interactive surface. You can write over any application in digital ink, and then save these notes to a file in SMART Notebook<sup>TM</sup> collaborative learning software for future reference and distribution.

Your interactive whiteboard is a full-speed USB 1.1 bus powered device with no external power supply. Because USB is the primary connectivity mode, your interactive whiteboard receives power from the computer through the included 3 m (9' 10") USB cable. There's no power switch on your interactive whiteboard. It's always running when your computer is turned on.

#### **Features**

Your interactive whiteboard is durable and reliable. It features a rugged, hardened interactive surface, a damage-resistant pen, and DTV (Digital Touch Vision) technology. Your interactive whiteboard measures 195.6 cm (78") diagonally and has a 4:3 aspect ratio.

## Feature highlights

#### DTV technology

Two digital cameras, one in each of the interactive whiteboard's top corners, track the position of your finger or the pen as it moves across the interactive surface.

#### Multitouch gestures

Your interactive whiteboard supports multitouch gestures (Windows® only). You can use two fingers to resize an object on a page, to rotate an object, to zoom in and out and more.

#### **Dual touch**

Your interactive whiteboard supports dual touch (Windows only). Two users can use their fingers to simultaneously perform mouse functions.

Your interactive whiteboard has limited support for dual write (Windows only). Two users can use their fingers to simultaneously write on the interactive whiteboard.

#### **Durable surface**

The interactive surface is scratch-resistant, dent-resistant and optimized for projection.

## How does your Inspire Board interactive whiteboard work?

Your interactive whiteboard functions as an input device for your computer, enabling you to work in any application on your connected computer. You need two additional components to use your interactive whiteboard: a computer and a digital projector. These components work together as

#### follows:

- Your computer runs an application and sends the image to your projector.
- · Your projector casts the image onto your interactive whiteboard.
- Your interactive whiteboard detects contact with its screen and sends each contact point, along with Pen tool information, to the connected computer.

InspireBoard's Product Drivers translates the information into mouse clicks and digital ink.

When you touch your interactive whiteboard's surface, the touch of your finger becomes a mouse click and you can control your computer from your interactive whiteboard. When you use a pen tool, InspireBoard Product Drivers changes the pointer to a colored pen, which enables you to write over your desktop or any open application with digital ink.

When you install the SMART Notebook software, a Floating tool is installed on your desktop. You can change pen settings such as the transparency, color and width of the ink. You can then save your notes to a file in SMART Notebook software. You can also customize other tools, such as the width of the eraser tool you use to erase your notes.

## Computer requirements

To successfully power your interactive whiteboard and run InspireBoard's Product Drivers, your computer must meet certain minimum requirements. For your interactive whiteboard's computer requirements, see the specifications of the InspireBoard.

## Accessories and replacement parts

For a full list of items that you can order for your Inspire Board 200 series interactive whiteboard, Contact your authorized InspireBoard reseller (<a href="www.juanatech.com">www.juanatech.com</a>) to order accessories and standard replacement parts for your InspireBoard interactive whiteboard.

## Installation tips

For the installation instructions for your InspireBoard interactive whiteboard, see the installation guide.

## Extending your USB cable

The USB cable included with your InspireBoard interactive whiteboard is within the limit defined by the USB standard for maximum length. Your interactive whiteboard has a built-in 1.5 m (5') USB cable and a 3 m (9' 10") USB cable is also included.

## **IMPORTANT**

The combined USB cables connected from your interactive whiteboard to your computer should not exceed 5 m (16').

However, if this cable isn't long enough to reach from your computer to your interactive whiteboard, you can use a bus-powered hub, such as the active USB extension cable to extend your USB connection.

## Avoiding electromagnetic interference (EMI)

You can take some precautions to prevent EMI to your interactive whiteboard:

- Don't route USB cables parallel to power cables.
- Cross USB cables over power cables at a 90° angle to reduce the risk of interference on the USB cables.
- Don't route USB cables close to common sources of EMI, such as electric motors or fluorescent lighting ballasts.
- Don't bend USB cables sharply.
- Don't use USB plug adapters or passive USB wall plates.

## Connecting your interactive whiteboard to a computer

#### Overview

Your InspireBoard 200 series interactive whiteboard's USB interface enables you to connect your interactive whiteboard to your computer. Because the included USB cable provides both a digital signal and power from your computer to your interactive whiteboard, you don't need an additional power supply.

## **IMPORTANT**

Your InspireBoard interactive whiteboard system supports one interactive whiteboard per computer connection on a primary display only.

## Matching your computer's resolution to your projector's resolution

Ensure that the resolution settings for your projector and computer match. If your computer's resolution doesn't match the projector's native resolution, the image doesn't properly fill your interactive whiteboard's surface and can shimmer or appear distorted.

Set the projector to its optimal image resolution by following the instructions included with your projector, and then set your computer's resolution to match. If you need help changing your computer's resolution, see the instructions included with your operating system.

You might need to adjust your computer's refresh rate to obtain the best results. Set the computer to an initial refresh rate of 60 Hz, and then adjust this rate up or down to determine the ideal refresh rate. For more information on changing your computer's refresh rate, see the instructions included with your operating system.

## Installing InspireBoard Product Drivers

You can install InspireBoard Product Drivers on any computer that meets certain minimum operating specifications using the software installation DVD included with your InspireBoard product or from

For your interactive whiteboard's system requirements, see the *InspireBoard interactive whiteboard specifications*.

### **TIMPORTANT**

- Disconnect the InspireBoard interactive whiteboard from your computer while you install the Product Drivers.
- There are no status lights on your InspireBoard interactive whiteboard.

  Product Drivers must be installed to view the interactive whiteboard's status.

## Orienting your interactive whiteboard

After you install the InspireBoard product drivers on your computer, orient your interactive whiteboard. Orienting your interactive whiteboard ensures the greatest possible level of writing and touch accuracy. Orient your interactive whiteboard any time your projector or interactive whiteboard has been moved since you last used it, or whenever the mouse pointer isn't properly aligned with the pen or your finger when you touch the interactive surface.

#### To orient your interactive whiteboard

1. On the interactive surface, search for **the Optical Touch Device app** icon in the notification area, and then select **Calibrate**.

The Calibration screen opens.

- 2. Pick up the pen from the pen tray.
- 3. Beginning at the first target on the screen, touch the center of the target firmly with the tip of the pen and hold the pen steady until the target moves to the next point. Repeat step until you arrive at the last point.

## **II** NOTE

The orientation procedure consists of six touches.

4. At the last point, touch the center of the target, pause and release the pen.

The Orientation screen closes.

## Using your interactive whiteboard

When you touch your interactive whiteboard's surface, the interactive whiteboard registers the horizontal and vertical (or x and y) coordinates on the interactive surface. Your computer's mouse driver interprets those coordinates and moves the pointer to the corresponding point on the projected image.

To open an application on your interactive whiteboard, press twice consecutively on the application's icon. When you press twice to open an application, it's the same as double-clicking your mouse to open an application on your computer. Similarly, each time you press once on your interactive whiteboard's surface, it's the same as a single left click.

## NOTE

If necessary, move the mouse or touch the interactive whiteboard's surface or press any key on your keyboard to bring your computer out of standby mode.

## Using the Floating Tools toolbar

You must install and run SMART Product Drivers on your connected computer to have use of the Floating Tools toolbar. While you work on your interactive whiteboard, the tool bar floats over your desktop and any open application. Use your finger or the provided pen tray pen to select a tool from this customizable tool bar to click, write, erase and open SMART Notebook software on your interactive whiteboard. For more information on how to use SMART Notebook software, see <a href="mailto:smarttech.com/support">smarttech.com/support</a>.

#### **NOTES**

- SMART Notebook software includes additional toolbars which allow you to control digital ink pens and other drawing tools.
- You're unable to use the Right-click tool from the Floating Tools tool bar on your InspireBoard interactive whiteboard.
- You can move this tool bar to either the left or right side of the screen.
- You can move this tool bar lower on your screen so younger students can reach it.
- You're unable to rotate this tool bar horizontally.

## Using gestures, dual touch and dual write

Your interactive whiteboard supports multitouch gestures, dual touch and dual write with your Windows computer.

## **IMPORTANT**

Gestures, dual touch and dual write require the Windows 7 or Windows 10 operating systems and the latest version of InspireBoard Product Drivers and SMART Notebook software (<a href="mailto:smarttech.com/downloads">smarttech.com/downloads</a>).

Multitouch gestures enable you to use pre-determined commands on your interactive whiteboard without using the keyboard or mouse. With a series of two-finger touches on your interactive whiteboard screen, you can navigate pages, change the look of an object and more.

Dual touch enables two users to touch the interactive whiteboard and to simultaneously perform mouse functions.

Dual write enables two users to use their fingers to write on the interactive whiteboard at the same time.

## **I** NOTE

Dual write has limited functionality with your InspireBoard 200 series interactive whiteboard.

Before you use these features, enable your interactive whiteboard to recognize them.

#### To enable gestures, dual touch and dual write

- Press the SMART Board icon in the notification area, and then press SMART Settings.
   The SMART Settings window appears.
- 2. Press SMART Hardware Settings.
- 3. Select **Mouse and Gesture Settings** from the drop-down menu.
- 4. Select Multitouch Mode.
- 5. Press Apply.
- 6. Press OK.

## Single-finger gestures

You can perform some gestures using one finger, including selecting an object and double-clicking.

Single-finger gestures include the following:

#### Selecting and deselecting an object (clicking)

Quickly press and release the interactive surface to select or deselect an object or option. This performs a standard mouse click.




This gesture starts programs if your operating system is set to start applications on a single click.




**Displaying menu options (right-clicking)** Press and hold the screen with your finger.

In SMART Notebook software, Windows and Microsoft® Office programs, the right-click menu appears.

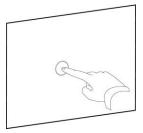

#### Dragging an object, scroll bar or window

Press and hold the scroll bar on the screen. Keep your finger on the screen and slowly move the object or scroll bar. When you reach the position you want, release your finger.

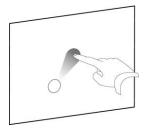


#### Double-clicking

Quickly press and release the interactive surface twice in the same spot. This performs a standard double-click.




This gesture starts programs if your operating system is set to start applications on a double-click.

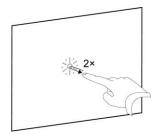


#### Displaying the next and previous page

Press the screen, and then quickly press again directly to the right of that point to display the next page.

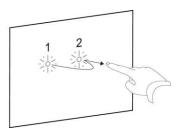

Press the screen, and then quickly press again directly to the left of that point to display the previous page.

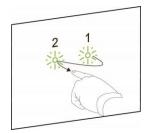

## Multi-finger gestures


You can perform some gestures using two or more fingers, including scaling, scrolling and manipulating objects. Multi-finger gestures include the following:

#### Displaying menu options (right-clicking)

Using two fingers on the same hand, press and hold the screen with your left finger and then to press the screen once with your right finger. Lift your left finger from the screen, and then select a menu item with any finger.

#### Enlarging an area or object

Use one finger on each hand to press in the center of the area or object, and then drag your fingers away from each other.

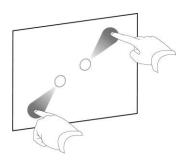


#### Reducing the scale of an object


depending on the application.

Use one finger on each hand to press the screen at opposite ends of the area or object, and then drag your fingers toward each other.

This gesture either scales an object on a page, or the entire page,

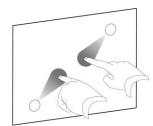


**Scrolling horizontally or vertically** Use two fingers on the same hand to press the screen. Keeping your fingers on the screen, move up, down, left or right on the page. Release your fingers when you're satisfied with the view.

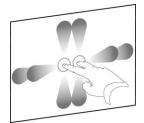


#### Rotating an object

Place one finger on either side of the object you want to rotate. Keep one finger stationary, and quickly move your second finger around the object. Release your fingers from the screen when you're satisfied with the angle.

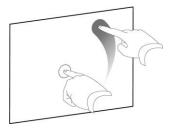


## Best practices for gestures and tools

Follow these guidelines when you use gestures and tools with your interactive product. Hold your fingers perpendicular (90°) to the interactive surface at the contact point.

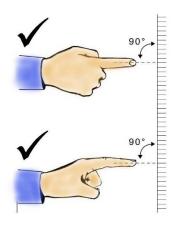

Keep your thumb and other fingers away from the interactive surface. They can generate unintentional commands.

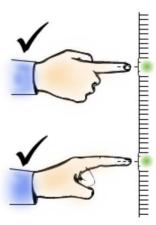

Keep your other hand, elbows and loose clothing away from the interactive surface. They can generate unintentional commands.



For "click" commands, quickly tap your finger on the interactive surface. Also, make sure you lift your finger far enough away from the interactive surface between presses so that your finger is out of the interactive whiteboard cameras' view.

## Maintenance and troubleshooting

## Tips for trouble-free performance

Your InspireBoard interactive whiteboard is durable but take care to prevent any damage to it and its parts.

- Replace the pen when the nib wears out.
- Don't touch the interactive surface with sharp or pointed objects.
- Don't use adhesive tape on the interactive surface.
- Don't set up and use your interactive whiteboard in an area with excessive levels of dust, humidity or smoke.

## Cleaning your interactive whiteboard

With proper care, your interactive whiteboard will provide years of trouble-free service. Follow these tips to keep your interactive whiteboard clean.

- To clean dust, dirt and finger grease, wipe the writing surface with a damp cloth or sponge. Use mild soap, if required.
- Don't spray cleaner directly onto the interactive surface. Instead, spray a light amount of cleaner on a cloth and then gently wipe the interactive surface.
- Don't allow excess cleaner to flow onto the frame's reflective surfaces.
- Don't touch the digital cameras located in the top corners of the frame. Don't attempt to clean the digital cameras without specific instructions from Juana Technologies.
- If ink is accidentally used on your interactive whiteboard, remove the ink as soon as possible. Ink becomes more difficult to remove the longer it stays on the display surface.

## CAUTION

Do not use harsh chemicals or abrasive cleaners on your interactive whiteboard.

## **IMPORTANT**

- Before you clean your interactive whiteboard, disconnect its USB cable.
- To view dirt or streaks more easily, set your projector to standby (lamp of) mode.

## General troubleshooting

## Adjusting the projected image

If your projector isn't installed in a fixed location, you can correct many image problems by shifting your projector so that the projected image fits squarely on the interactive surface. Optimally, each side of the image should extend almost to the edge of the interactive surface.

## Resetting your interactive whiteboard

You can reset your interactive whiteboard by disconnecting and then reconnecting the USB cable. This turns the power off and back on, restarting all components of your interactive whiteboard.

## Preventing USB cable issues

To troubleshoot some common cable routing issues, try disconnecting accessories such as USB hubs and USB extension cables that are connected to your interactive whiteboard.

The basic system consists of the InspireBoard interactive whiteboard, USB cable, computer hardware, computer operating system and InspireBoard Drivers. You can try isolating and replacing each component to identify the cause of the connectivity issue.

## Troubleshooting tips

This section describes some symptoms, causes and solutions for problems that you could experience with your interactive whiteboard

## Transporting your interactive whiteboard

Save your original InspireBoard interactive whiteboard packaging so that it's available if you need to transport your interactive whiteboard. When required, repack your interactive whiteboard with all of the original packaging. This packaging was designed with optimal shock and vibration protection. If your original packaging is no longer available, you can purchase the same packaging directly from your authorized reseller.

## **Contacting Support**

InspireBoard Support welcomes your call. However, if you have trouble with your Inspireboard product, consider contacting your authorized reseller first. Your reseller can often resolve the issue without delay.

Before you contact InspireBoard Support, ensure the following:

- You know the serial number of your interactive whiteboard.
- The computer specifications and operating system meet the minimum system requirements for Product Drivers.

- The USB cable is connected properly to your computer and interactive whiteboard.
- Device drivers are installed on your operating system.
- The interactive surface and bezels aren't optically obstructed.
- You oriented your interactive whiteboard.

#### To determine your interactive whiteboard's serial number

Look on the lower right edge of your interactive whiteboard's frame when you're facing the front of your interactive whiteboard. The serial number is also on the back of the interactive white board.